


# BTT SKR V1.4 PIN

WWW.BIGTREE-TECH.COM

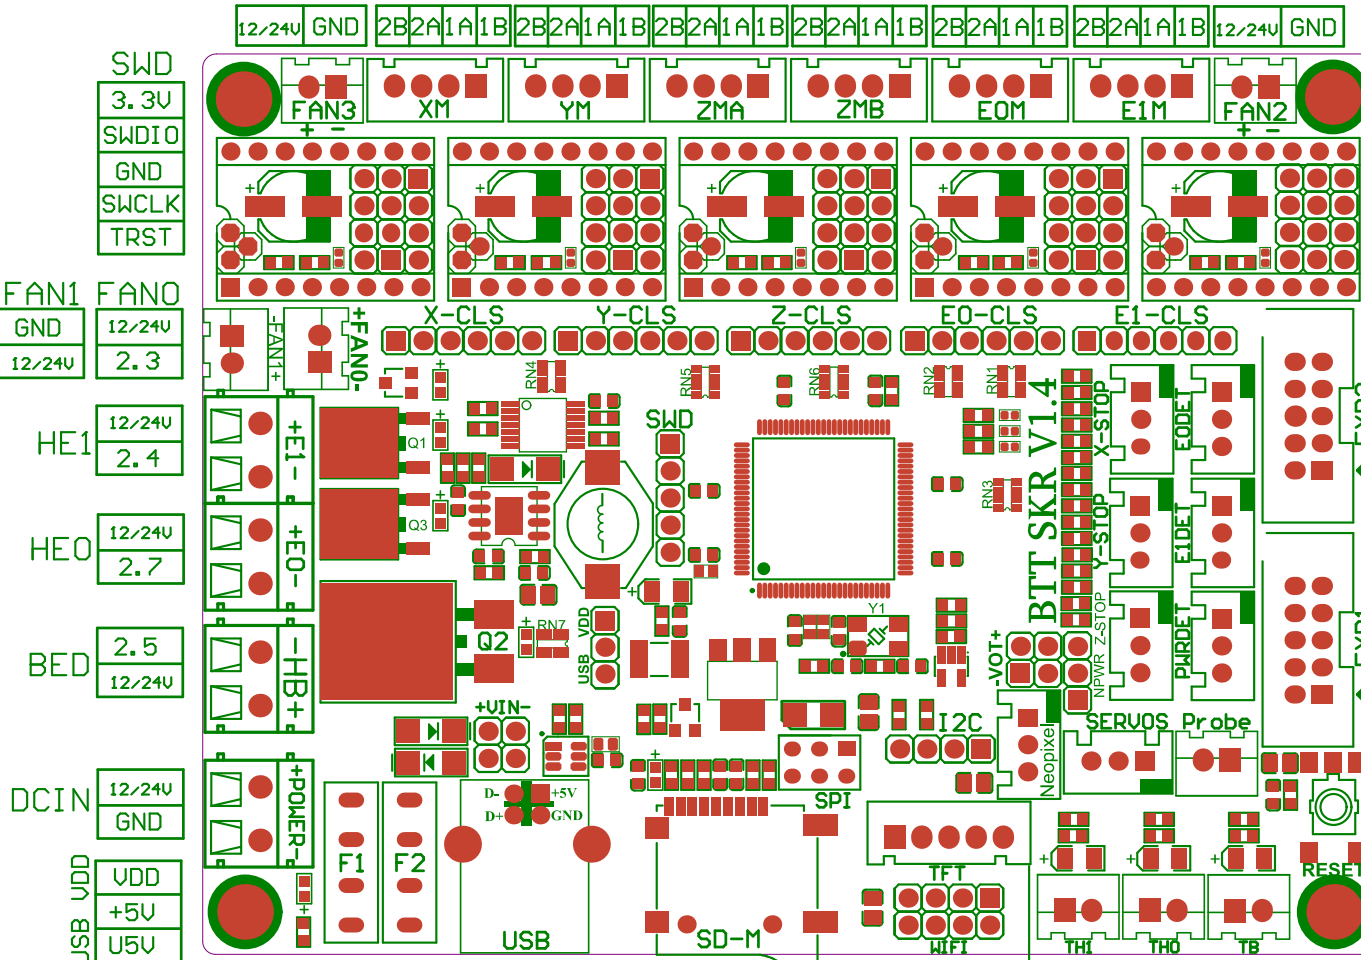

EN	STEP	DIR	
2.1	2.2	2.6	X
2.8	0.19	0.20	Y
0.21	0.22	2.11	Z
2.12	2.13	0.11	E0
1.16	1.15	1.14	E1

XCS	YCS	ZCS	EOCS	E1CS
1.10	1.9	1.8	1.4	1.1
0.5	MISO			
1.17	MOSI			
0.4	SCK			

X-STOP	X-STOP		
+5V	+5V		
GND	GND		
1.29	1.26		
Y-STOP	Y-STOP		
+5V	+5V		
GND	GND		
1.28	1.25		
Z-STOP	Z-STOP		
+5V	+5V		
GND	GND		
1.27	1.0		

EXP2	
NC	GND
RESET	1.31
0.18	3.25
0.16	3.26
0.15	0.17

EXP1	
+5V	GND
1.23	1.22
1.21	1.20
1.19	1.18
0.28	1.30

-VOUT+	-VOUT-		
GND	5V0T		
GND	5V0T		
	NPWR		
	5V0T		
	NPWR		
	+5V		

Neopixel	
NPWR	
1.24	
GND	

SERVOS	Probe
GND	NPWR
2.0	GND
	0.10

+VIN-	USB	SPI
12/24V	GND	D-
12/24V	GND	U5V
		0.26
		0.7
		0.8
		GND
		0.9
		+5V

I2C	TFT
0.1	0.0
GND	+5V
RST	RX0
	TX0
	GND
	NPWR

TH1	TH0	TB
0.23	AGND	0.24
	AGND	0.25
	AGND	

MONI-SD
0.27
0.8
0.7
0.9
0.6
DATA2
MISO
SCK
MOSI
SSEL

WIFI
3.3V
NC
NC
4.29
4.28
NC
NC
GND