


STEP_PIN	PB9	PB8	PA8	PC7	PC6	PD15	PD14	PD13	PD12	TMC_SW_MOSI	PB15
DIR_PIN	PE0	PG11	PD6	PD3	PA15	PG7	PG4	PD11	PD8	TMC_SW_MISO	PB14
ENABLE_PIN	PE1	PG12	PD7	PD4	PD0	PG8	PG5	PG2	PD9	TMC_SW_SCK	PB13
CS_PIN	PG13	PG10	PD5	PD1	PA14	PG6	PG3	PD10	PB12		

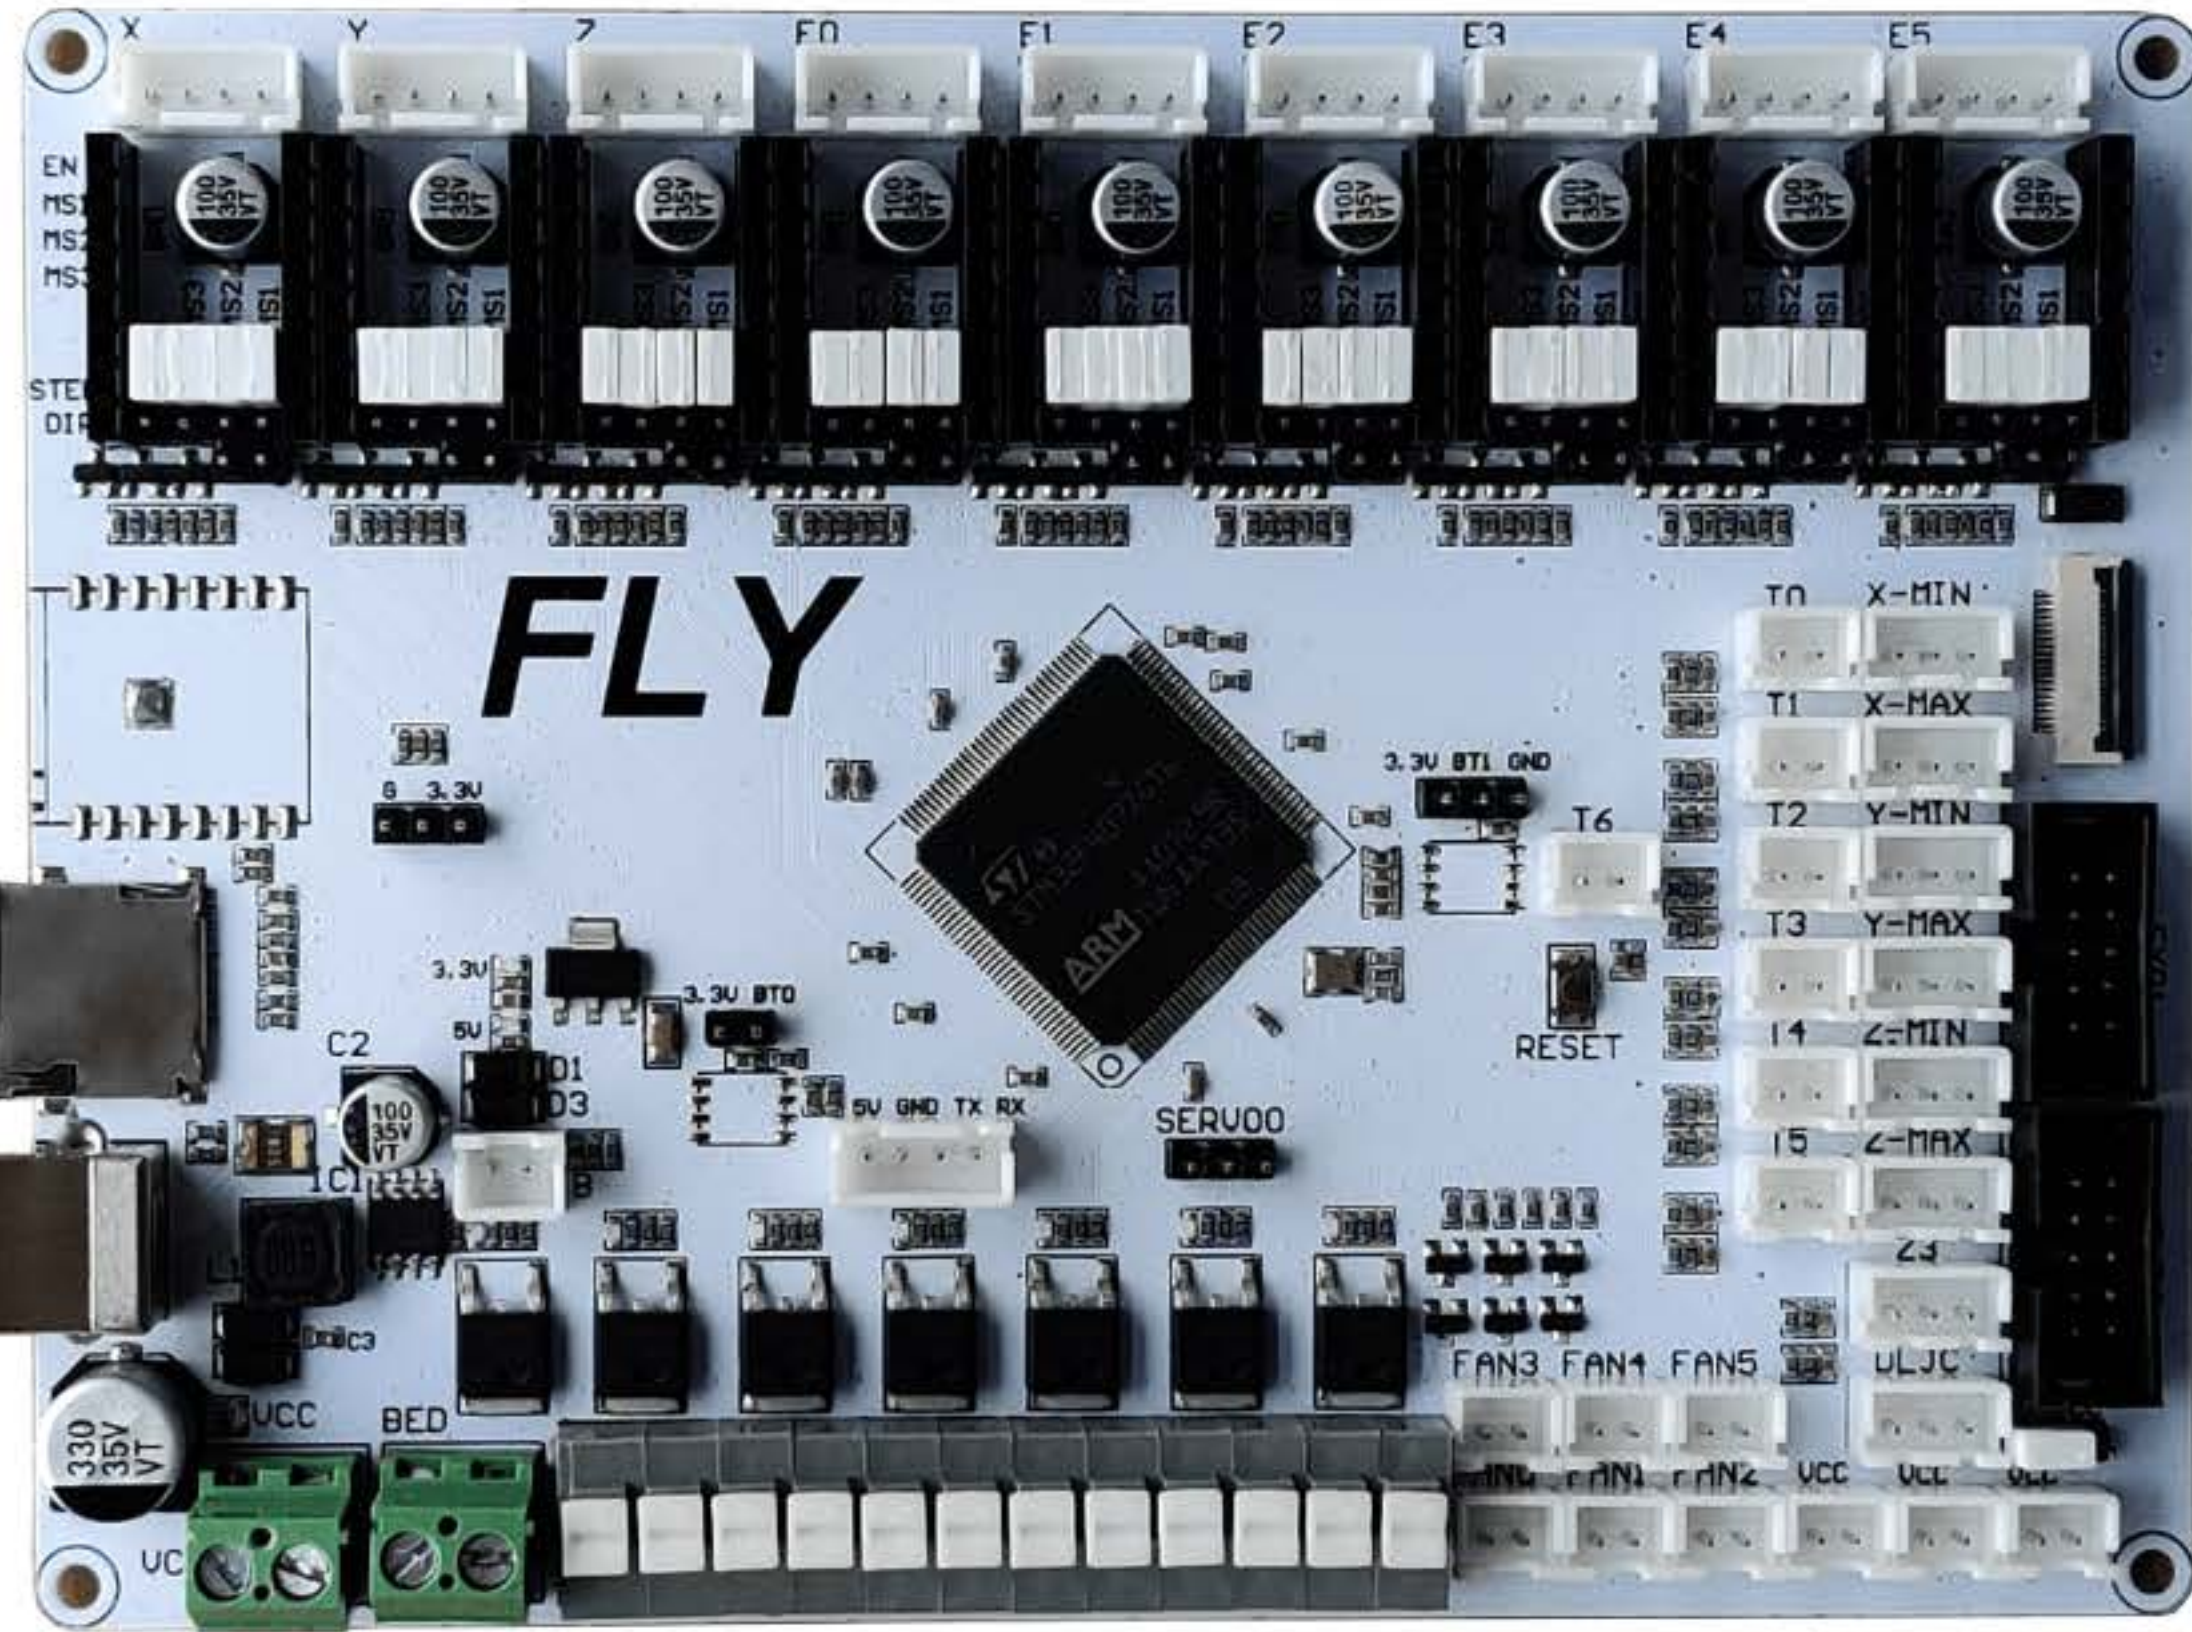

SDCD	PC13
SDIO D1	PC9
SDIO D0	PC8
SDIO SCK	PC12
SDIO CMD	PD2
SDIO D3	PC11
SDIO D2	PC10
USB DP	PA12
USB DM	PA11

TEMP_0	PA0	X_MIN	PC3	FPC 20P 0.5MM
TEMP_1	PC1	X_MAX	PC2	5V
TEMP_2	PC0	Y_MIN	PF2	TMC MOSI PB15
TEMP_3	PF10	Y_MAX	PF1	TMC SCK PB13
TEMP_4	PF5	Z_MIN	PF0	TMC MISO PB14
TEMP_5	PF4	Z_MAX	PC15	PB10
		Z3	PC14	PE15
		DLJC	PA3	PE12
		T6(MAX6675)		PE14
SPI1 CS	PA4			PE10
SPI1 SCK	PA5			PE8
SPI1 MOSI	PA6			PE7
				PE9
EXP1		EXP2		PG1
PB10	PE15	PB14	PB13	PG0
PE14	PE12	PC5	PF11	PF15
PE10	PE9	PC4	PB15	PB1
PE8	PE7	PB2	RESET	PB14
GND	5V	GND	NC	PF13
				PF11
				PB0

BED	PE2	HEATER_0	PF7	FAN0	PF8
TEMP_BED	PF3	HEATER_1	PF6	FAN1	PF9
		HEATER_2	PE6	FAN2	PA2
		HEATER_3	PE5	FAN3	PA1
		HEATER_4	PE4	FAN4	PE13
		HEATER_5	PE3	FAN5	PB11